


DigiKeyer II and ACLog setup

Router setup:

Note: The absolute port numbers do not matter. The key is consistency - the same port number must be used for a specific function every time it is used.

1. Assign the radio control virtual COM port.
2. Assign a port for WinKey.
3. Assign a port for FSK if you intend to use MMTTY or MMVARI for RTTY.

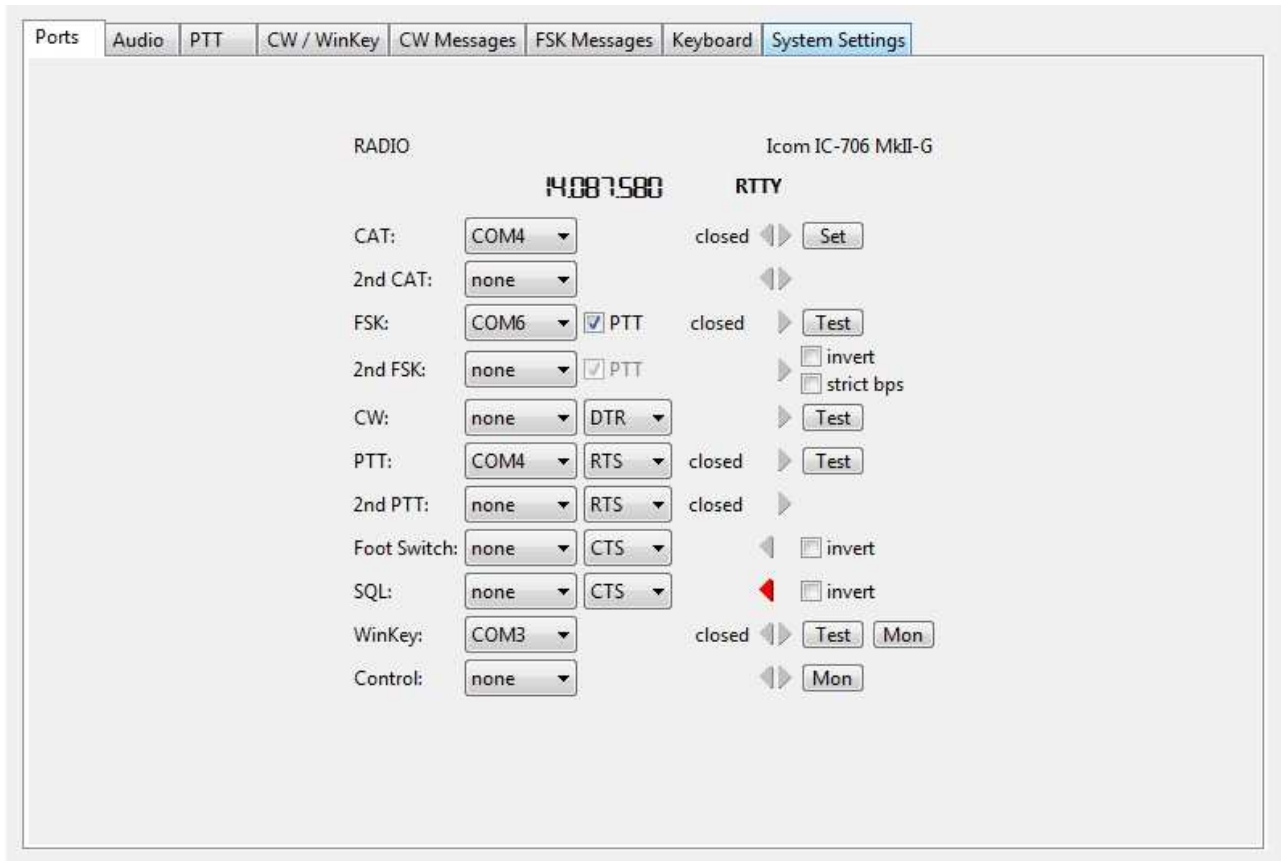

4. Save the settings to a preset by selecting **Preset | Save as**. Choose a position and name it ACLog.

ACLog setup:

1. Click **Settings | Rig Interface** to configure the radio interface.

Rig Interface Setup

Select Rig:

- Ten Tec Fnt Pnl
- Ten Tec Pegasus
- Yaesu
- Yaesu 757 GX II
- Yaesu 890
- Yaesu 920
- Yaesu 990
- Yaesu 1000 D
- Yaesu 1000
- Yaesu FTdx9000

Comm Port:

1 2 3 4 5

Baud Rate (k):

1.2 2.4 4.8 9.6 14.4

Parity:

Odd None Even

Connection Power:

None RTS DTR

2. Select your Rig
3. Select the Port you assigned for Control in Router
4. Set the Baud Rate, Data Bits, Parity and Stop Bits settings required by your radio.
5. Click Done to save your settings

Keying Options

None

RTS DTR

Serial

WinKey

Printer

Parallel

6. Click **Settings | Transmit | CW Setup**
7. Select WinKey
8. Set Serial to the port you assigned for WinKey in Router.
9. Click Done to save your settings